

Safe Working load of each NOZZLE QUICK FIST:

Safe Working Load:

1 Clamp

Screw or bolt: 50lbs (23 kilos)

Safe Working Load in Crew Quarters (NFPA 1901):

1 Clamp

Screw or bolt: 15lbs (7 kilos)

Installation Instructions:

- The two protrusions on the base will keep the clamp from turning while in use. Using the template below, drill 3 X 1/4" (6mm) holes. The outer two holes need be about 1/8" (3mm) deep. Use a 1/4" bolt or screw and a washer to mount the QUICK FIST clamp.
- 2. The QUICK FIST can be mounted with the strap facing in any direction.
- 3. To clamp: Put the Nozzle between the jaws and push the strap to reach the desired tightness.

Made in USA

End of the Road, Inc 2212 Dortch Ave.


Nashville, TN 37210, USA

www.endroad.com

ITEM #50050

U.S. and world wide patents pending UK patent 2403262

TEMPLATE

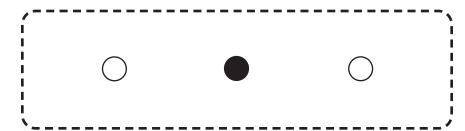



Safe Working load of each NOZZLE QUICK FIST:

Safe Working Load:

1 Clamp

Screw or bolt: 50lbs (23 kilos)

Safe Working Load in Crew Quarters (NFPA 1901):

1 Clamp

Screw or bolt: 15lbs (7 kilos)

Installation Instructions:

- 1. The two protrusions on the base will keep the clamp from turning while in use. Using the template below, drill 3 X 1/4" (6mm) holes. The outer two holes need be about 1/8" (3mm) deep. Use a 1/4" bolt or screw and a washer to mount the QUICK FIST clamp.
- The QUICK FIST can be mounted with the strap facing in any direction.
- 3. To clamp: Put the Nozzle between the jaws and push the strap to reach the desired tightness.

Made in USA

End of the Road, Inc

2212 Dortch Ave. Nashville, TN 37210, USA

www.endroad.com

ITEM #50050

U.S. and world wide patents pending
UK patent 2403262

TEMPLATE

