


MINI
Quick Fist
Rubber Clamp

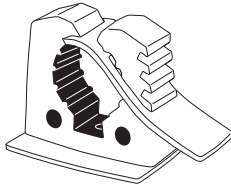

Installation Instructions:

1. Mount with one #10 bolt and washer through the center hole; or 4 sheet metal screws and washers through the holes on the four corners of the pad.
2. The MINI QUICK FIST can be mounted with the strap facing in any direction.
3. To clamp: Put the tool or implement into the jaws and push the strap to its desired tightness.
4. The MINI QUICK FIST clamps are great as pipe stand-offs, but do not use on pipes whose temperature consistently exceeds 180 degrees F (or 82 degrees C).


Made in USA

End of the Road, Inc
2212 Dortch Ave.
Nashville, TN 37210, USA
www.endroad.com

ITEM #30052

U.S. AND world wide patents pending
UK patent 2403262

MINI
Quick Fist
Rubber Clamp

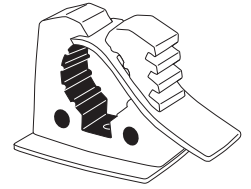

Installation Instructions:

1. Mount with one #10 bolt and washer through the center hole; or 4 sheet metal screws and washers through the holes on the four corners of the pad.
2. The MINI QUICK FIST can be mounted with the strap facing in any direction.
3. To clamp: Put the tool or implement into the jaws and push the strap to its desired tightness.
4. The MINI QUICK FIST clamps are great as pipe stand-offs, but do not use on pipes whose temperature consistently exceeds 180 degrees F (or 82 degrees C).

Made in USA

End of the Road, Inc
2212 Dortch Ave.
Nashville, TN 37210, USA
www.endroad.com

ITEM #30052

U.S. AND world wide patents pending
UK patent 2403262